

# PMP Rapid-Fire™ Pulser

## FAQ – Frequently Asked Questions

---

### **Question:**


How do I remove the Rapid-Fire sensor from a VR-10 computer or non-computer?

### **Answer:**

The Rapid-Fire sensor has an anti-backlash bearing to prevent false pulses due to computer wheel bounce. This creates a very positive engagement with the computer gear.

This positive connection can make it seem a little difficult to remove the sensor in the event it needs to be removed. With a little care it is quite easy.

1. Remove the two Torx T20 screws holding the tie bar and sensor in place.
2. Note how the tie bar fits over the locating lugs that are cast into the side frames of the computer.
3. Hold the tie bar at each end
4. Move the left side of the tie bar toward you about ½” away from the computer.
5. Gently rock the tie bar up and down as you pull slightly up and towards you.
6. This rocking action will help release the connection between the sensor anti-backlash gear and computer gear.
7. The sensor will disengage and the sensor and tie bar will be free from the computer.

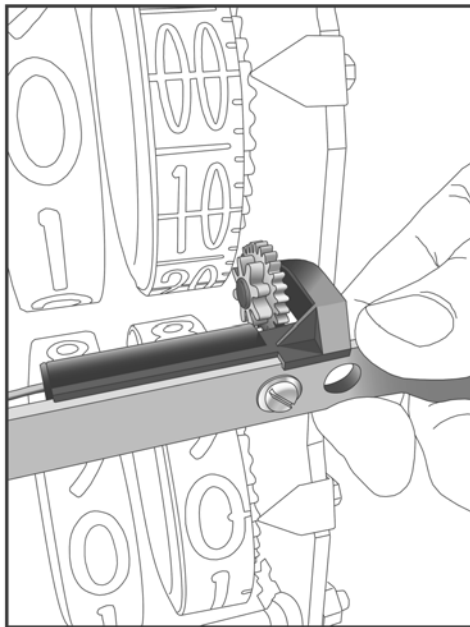

**PMP CORPORATION**  
P.O. Box 422 • 25 Security Drive  
Avon, CT 06001  
Email: [sales@pmp-corp.com](mailto:sales@pmp-corp.com)

Local: 860-677-9656  
Toll Free: 800-243-6628  
Toll Free Fax: 888-674-0196  
Web: [www.pmp-corp.com](http://www.pmp-corp.com)

