


External Adjustment Instructions for the Tokheim/Gasboy Electric Reset

If the electric reset fails to complete a reset cycle, or fails to shut off after completing a reset cycle, external adjustment must be performed.

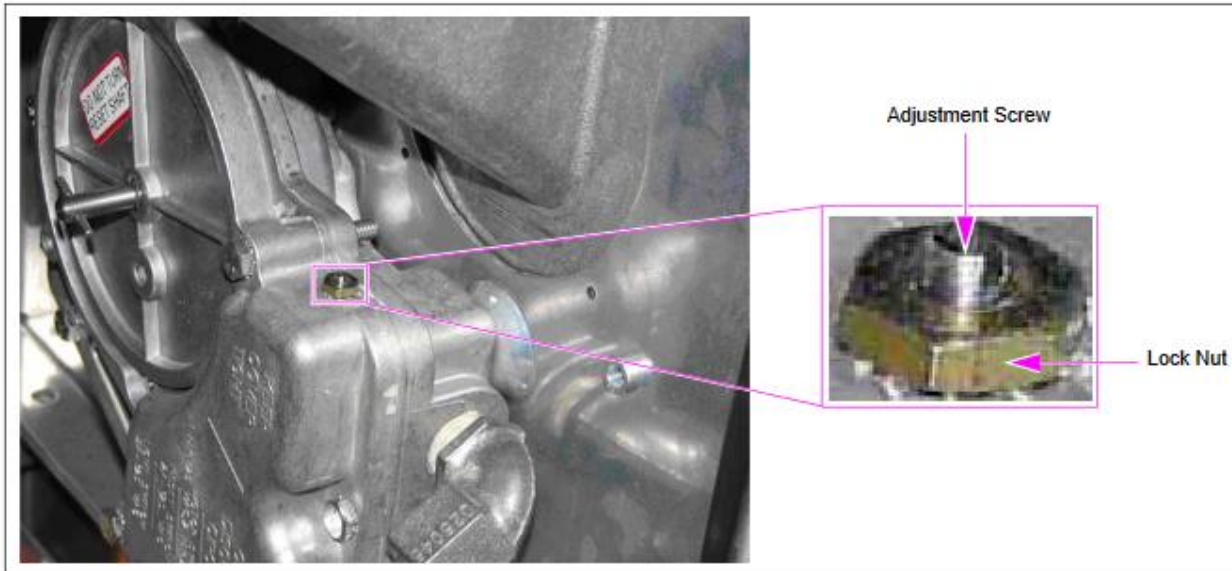

To adjust, do the following:

- 1) Loosen the lock nut on the adjustment screw, and back out the screw until it stops.
- 2) Move the pump handle to the ON position.
- 3) Turn the adjustment screw in until the reset motor starts.
- 4) Advance the adjustment screw an additional 1/2 to 3/4 turn. Hold the screw in this position and tighten the lock nut.
- 5) Move the pump handle to the OFF position, then back to the ON position to verify if the reset cycles properly. The reset coupling should make one revolution and then stop.