
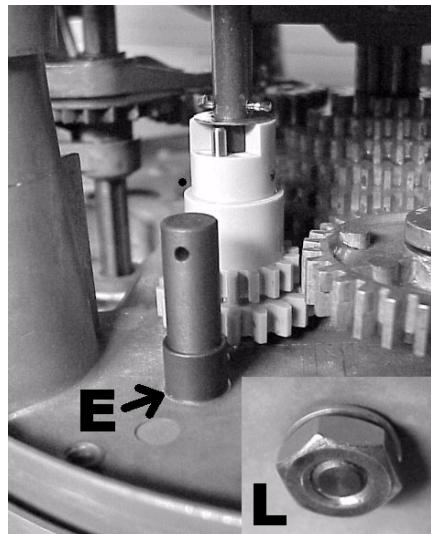


PMP CORPORATION
P. O. BOX 422, AVON, CT 06001
Tel: (860) 677-9656

COMPOUND GEAR STUD KIT
PMP P/N 81011

Installation Instructions

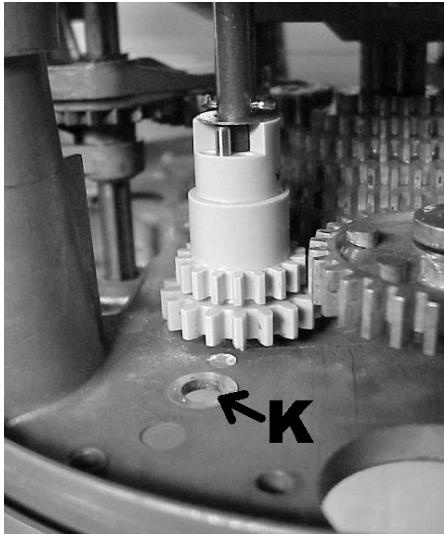

- 1) Install compound gear stud through hole (K) in the base plate adjacent to the dollar drive shaft.
- 2) Install lock washer and nut (L) on the threaded end of the stud under the base plate.
- 3) Tighten nut firmly with a 7/16" wrench while gripping the shoulder (E) of the stud with pliers.

CAUTION: *Do not grip the upper portion of the stud with pliers, as this may damage the gear bearing surface.*