



Installation Instructions Compound Gear Stud Kit PMP P/N 81011

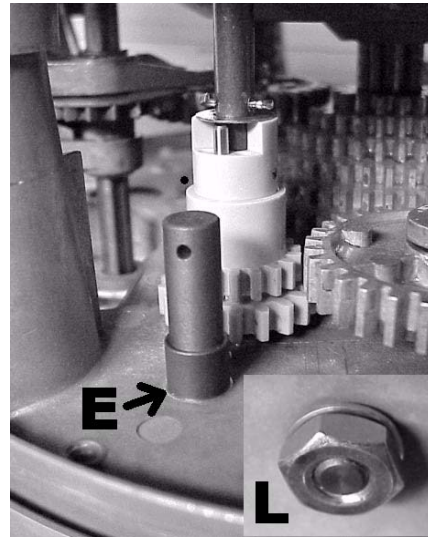

- 1) Install compound gear stud through hole (K) in the base plate adjacent to the dollar drive shaft.
- 2) Install lock washer and nut (L) on the threaded end of the stud under the base plate.
- 3) Tighten nut firmly with a 7/16" wrench while gripping the shoulder (E) of the stud with pliers.

CAUTION: Do not grip the upper portion of the stud with pliers, as this may damage the gear bearing surface.

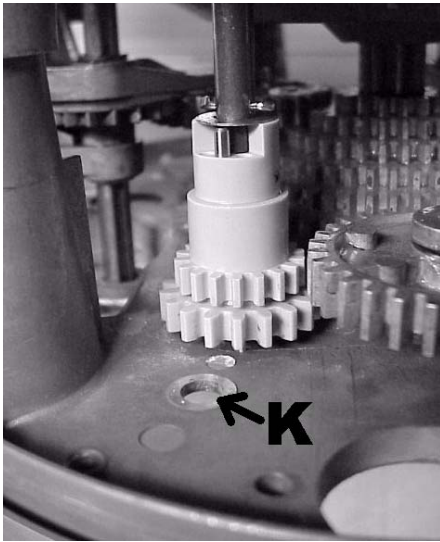

PMP CORPORATION
P.O. Box 422 • 25 Security Drive
Avon, CT 06001
Email: sales@pmp-corp.com

Local: 860-677-9656
Toll Free: 800-243-6628
Toll Free Fax: 888-674-0196
Web: www.pmp-corp.com



© PMP CORP.